

Power ON/OFF:

- Turn the Power/Volume Knob clockwise to turn the radio on and increase volume.
- Turn the Power/Volume Knob anti-clockwise to turn the radio off and decrease volume.

PTT:

- Press and hold the PTT button to transmit.

SIDE KEY 1:

- Enable/Disable squelch (short press) and long hold to enable/disable FM radio.
- Long hold to turn off FM radio.

SIDE KEY 2:

- Short press to enable/disable LED Flashlight and long hold to enable/disable Channel scan function.
- Long hold to turn off Channel scan function.

VM/EXIT (Function Keypad):

- Press to exit menu.
- Long hold to lock/unlock function keypad.

MENU (Function Keypad):


- Short press to enter the menu, to select a menu item short press once more.

UP (Function Keypad):


- Channel select plus 1.
- Menu select minus 1.

DOWN (Function Keypad):

- Channel select minus 1.
- Menu select minus 1.

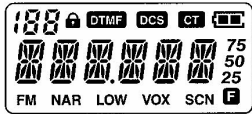	CT	CTCSS
	DCS	DCS
	VOX	VOX Function
	NAR	Narrow Band Function
		Battery Capacity display
	188	Channel No.
		Frequency working/Menu setting
		Keypad Lock
	75 50 25	Frequency Mantissa indicate
	LOW	Low Power setting,
	SCN	Scan Function

the battery towards direction. The Buckles on the tail of battery would fasten the battery pack, until can hear "clicking" sound; To remove the battery pack, please turn off the transceiver first. Then press the buckles of the battery, at the same time, the battery will be pushed back, take the battery away;

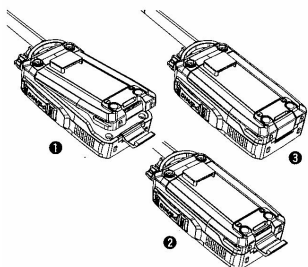

► INSTALL ANTENNA

Install the antenna into the transceiver connector, holding the antenna base and turning it clockwise until secure;




△ NOTE

Please do not antenna as a handle. the keys or external type loudspeaker microphone hanging on the antenna, which can damage the antenna and lowered transceiver's performance.


► INSTALL BELT CLIP

Belt clip insert into back of battery hole.

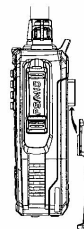

► INSTALLING THE OPTIONAL SPEAKER/MICROPHONE

Outward apart the moistureproof rubber of the headphone mouth, Insert the speaker/microphone plugs into the speaker/microphone jacks.

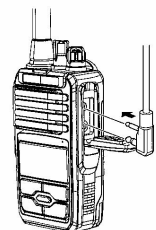

△ NOTE

The transceiver is not fully water resistant while using the speaker/microphone.

MENU FUNCTIONS:

BEEP PROMPT (BEEP)

UP/DOWN to enable/disable button press sound, press menu button to confirm selection.

TRANSMIT POWER (POWER)

UP/DOWN to alter transmit power from low/high, press menu button to confirm selection.

POWER ON DISPLAY (PON.MSG)

Displays various messages/information on the screen on power on.

DC -Displays battery voltage. 4.2V max.

MSG -Displays radio model.

OFF -Displays no message.

Press menu button to confirm selection.

KEYPAD LOCK (LOC.KEY)

Keypad lock settings.

MANU -Manual keypad lock.

AT 5/10/20/30 -Automatically locks keypad after it is unlocked.
Time in seconds.

ATS 5/10/20/30 -Automatically locks keypad after it is unlocked.
Time in seconds.

Press menu button to confirm selection.

SCAN (SCAN)

Short press menu button to start channel scan.

FM RADIO (RADIO)

UP/DOWN to enable/disable the FM radio, press menu button to confirm selection.

SQUELCH LEVEL SETTING (SQL)

UP/DOWN to alter squelch level from 0-9, press menu button to confirm selection.

VOX FUNCTION SETTING (VOX.SWI)

UP/DOWN to enable/disable voice activated transmit, press menu button to confirm selection.

CTCSS (CT-DCS)

UP/DOWN to alter CTCSS, press menu button to confirm selection.

VOICE PROMPT (VOICE)

UP/DOWN to enable/disable power on voice prompt, press menu button to confirm selection.

RESET RADIO (RESET)

!WARNING! MAY RESET CUSTOM CHANNELS !WARNING!

VFO -Menu reset.

Full -Menu and channels reset.